

## INSTALLATION OF AROMA PUMP




### Hydraulic connection

- 1) Insert "T" on the steam pipe, as far as possible from the generator, possibly after a curve of the copper tube
- 2) Connect the suction pump to the aroma tank (diluted as instructed) and the delivery to the "T" with the flexible tubes supplied. Be careful not to let the tubes touch the "naked" copper tube.
- 3) If possible, anchor a weight to the tube inside the tank so that it remains firm on the bottom.
- 4) Possibly keep the suction hose no longer than 40 cm and with as few curves as possible.


### Electrical connection

- 1) Connect pump power to the auxiliary output of the steam generator AUX0 ( A3-A4)
- 2) Bring 230V power supply to A1 and A2 (possibly with main terminal block bridges)

3)

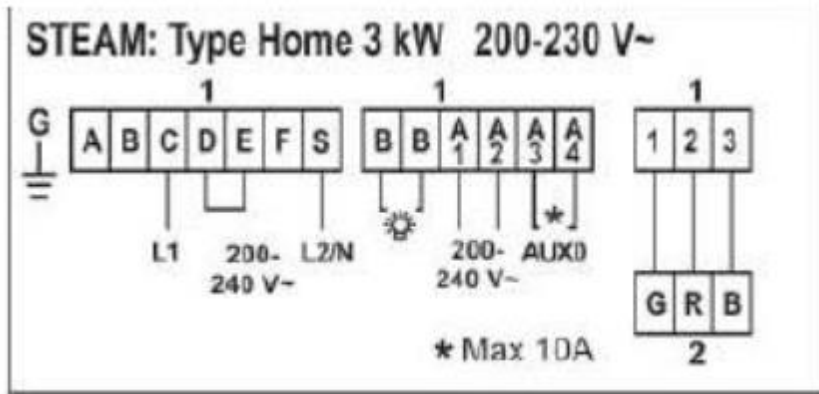


### DISPLAY PROGRAMMING

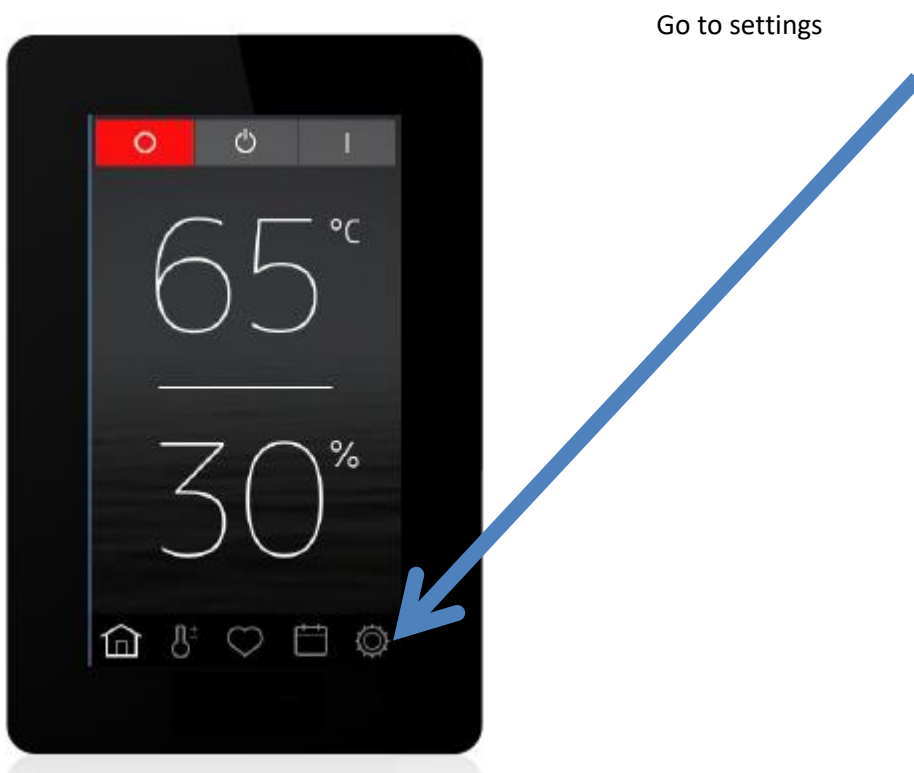




ENTER OPTIONS

ENTER AUX0

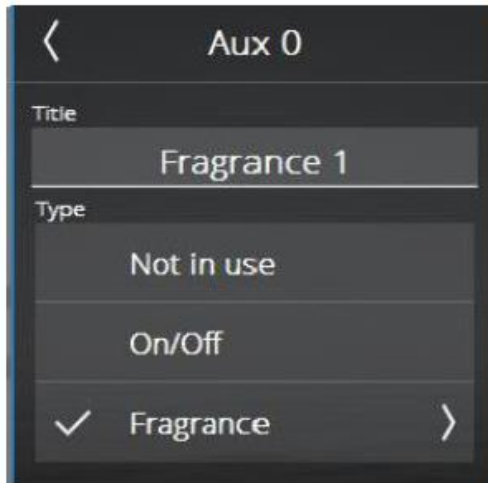

SET AUX0 as FRAGRANCE

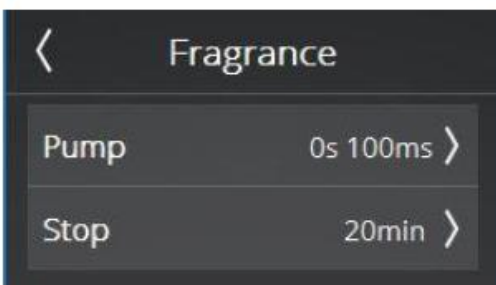


Set operating intervals

PUMP: is the continuous ignition duration of the aroma pump

STOP: it is the interval between one ignition of the pump and the other.

EXAMPLE if we set PUMP 1 second and STOP 4 minutes, the aroma pump will inject essences into the steam for 1 second every 4 minutes  
Managing these intervals intensifies or decreases the intensity of the fragrance diffused in the cabin.

RETURN TO THE HOME SCREEN

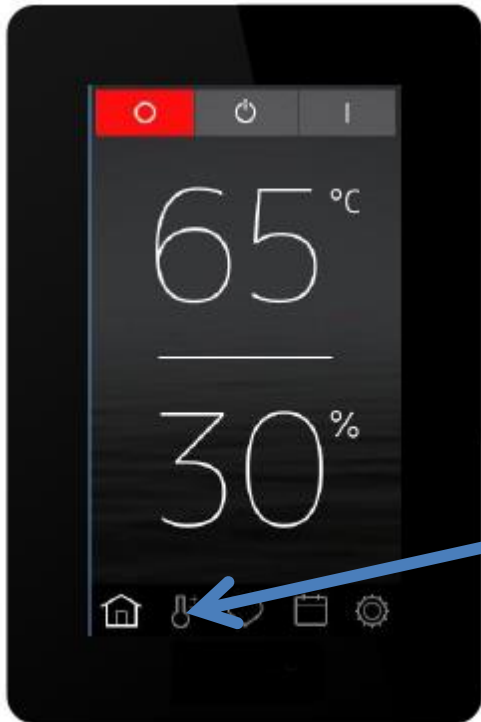

PRESS THERMOMETER BUTTON



ACTIVATE FRAGRANCE BUTTON

WHEN YOU TURN ON THE STEAM GENERATOR, THE PUMP WILL BE ACTIVATED AUTOMATICALLY WITH THE INTERVALS SET **ONLY WHEN THE STEAM IS LEAVING THE GENERATOR.**

NB: AT THE FIRST IGNITION IT WILL TAKE SOME TIME TO FEEL THE ESSENCE INSIDE THE CABIN BECAUSE YOU MUST FIRST "FILL THE WHOLE TUBE" WITH ESSENCE TO GET TO THE STEAM.

(TO SPEED UP THIS PROCEDURE YOU CAN, WITH THE STEAM OFF, TEMPORARILY SET THE AUX0 OUTPUT TO ON/OFF AND ACTIVATE IT FROM THE BUTTON ABOVE UNTIL THE TUBE FILLS)

**ALWAYS REMEMBER TO DILUTE THE ESSENCE WITH THE DOSAGES WRITTEN ON THE RELATIVE PACKAGING**