


TRAY VISTA

2022-10-25

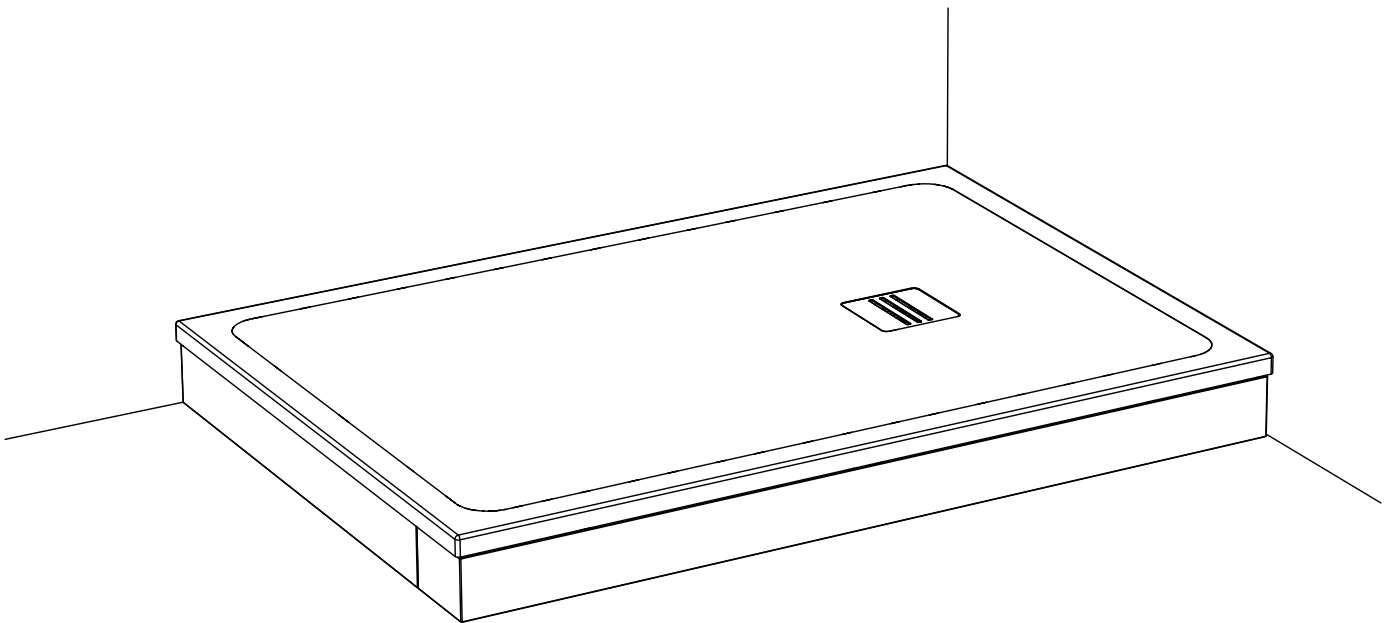




Installation instruction

2900 3040


TYLÖ

x1
130 White 9607 6150
130 Antracite 9607 6152
160 White 9607 6154
160 Antracite 9607 6156

x1
White 1800 0418
Antracite 1800 0419

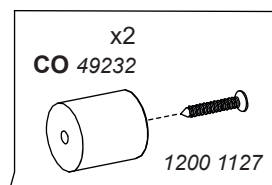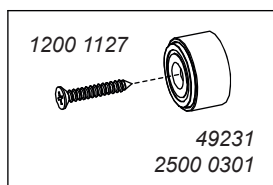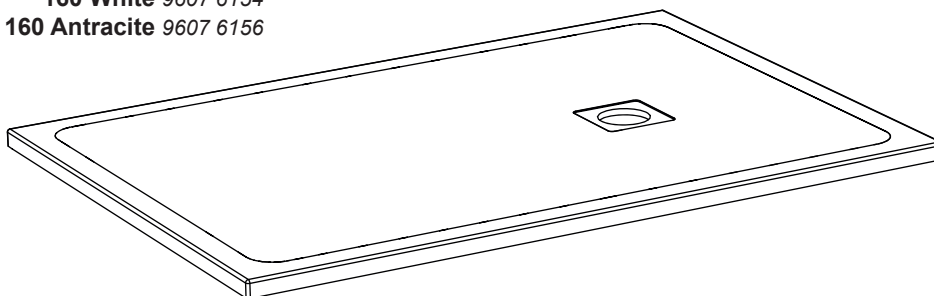



x1
130 4700 0040
160 4700 0042





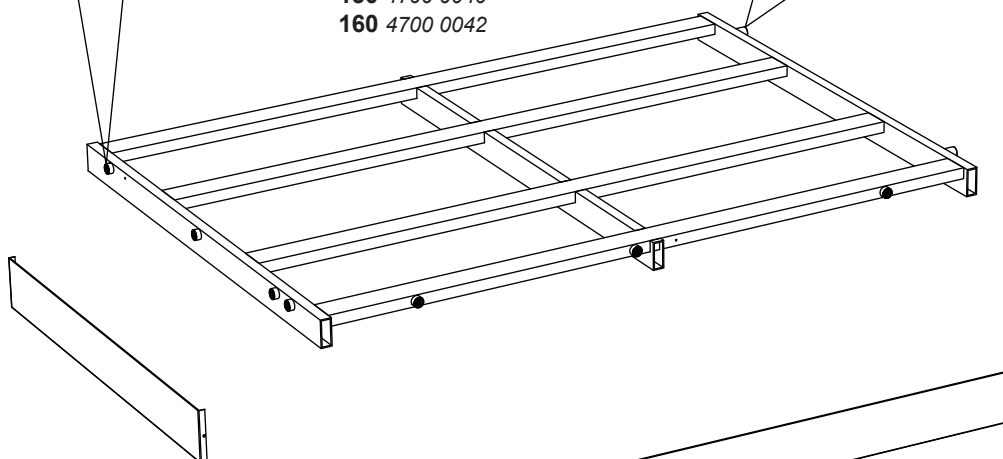


x1
130/160 CO White 1800 0446
130/160 CO Black 1800 0448
x2
130/160 DCO White 1800 0446
130/160 DCO Black 1800 0448

x1
130 CO White 1800 0430
130 CO Black 1800 0432
160 CO White 1800 0434
160 CO Black 1800 0436




160 DCO White 1800 0438
160 DCO Black 1800 0440
130 DCO White 1800 0442
130 DCO Black 1800 0444

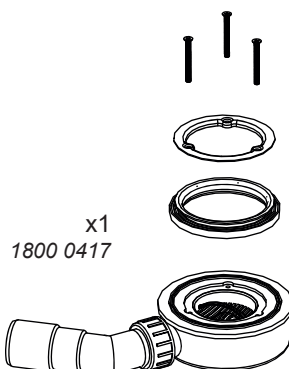
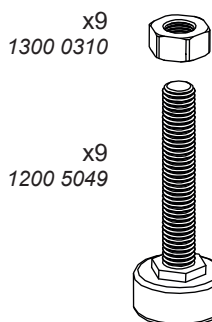


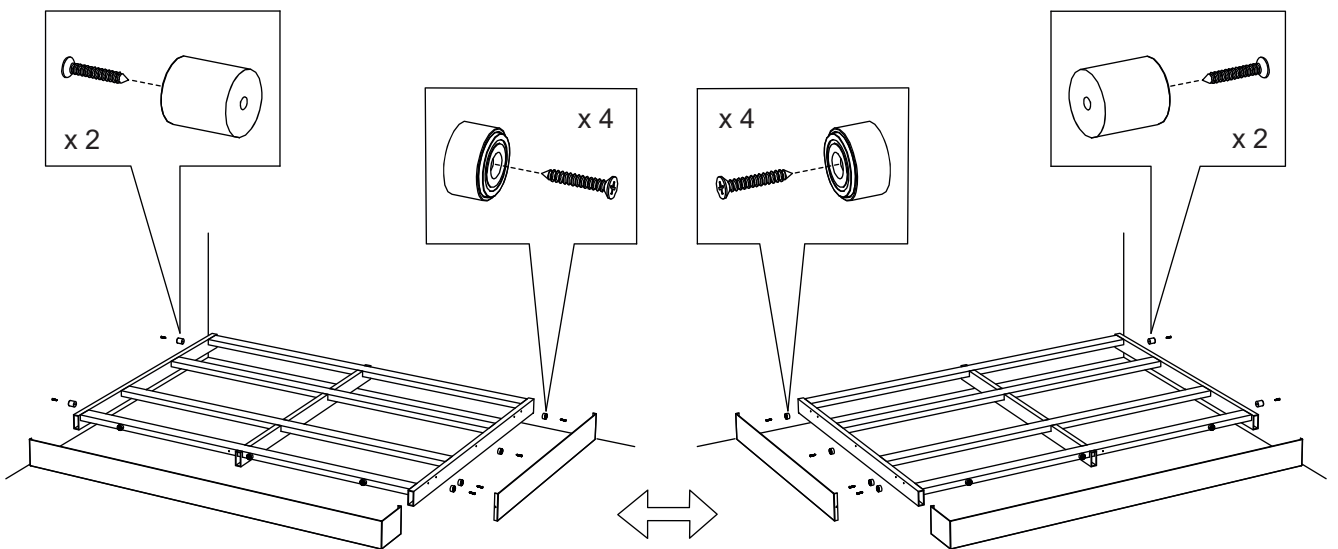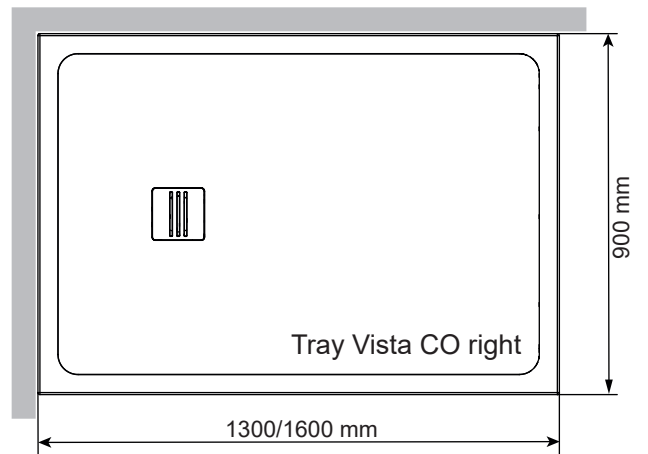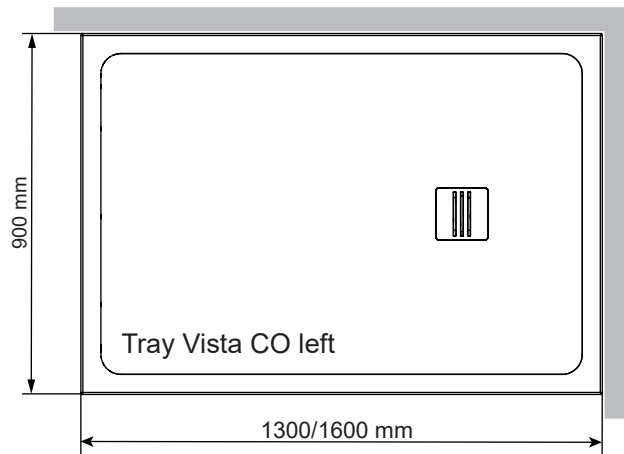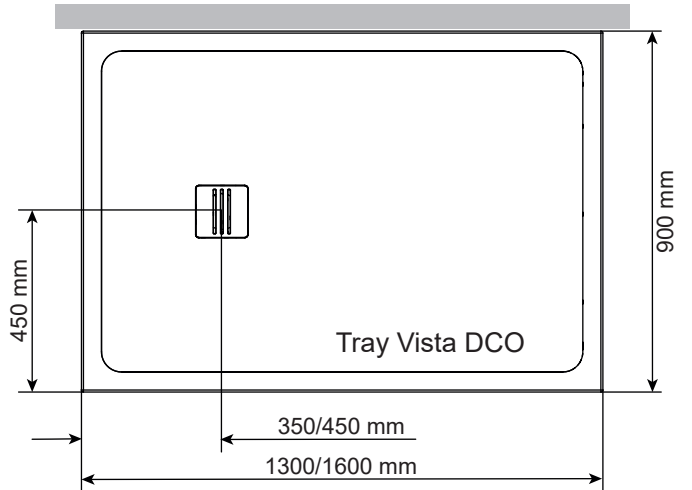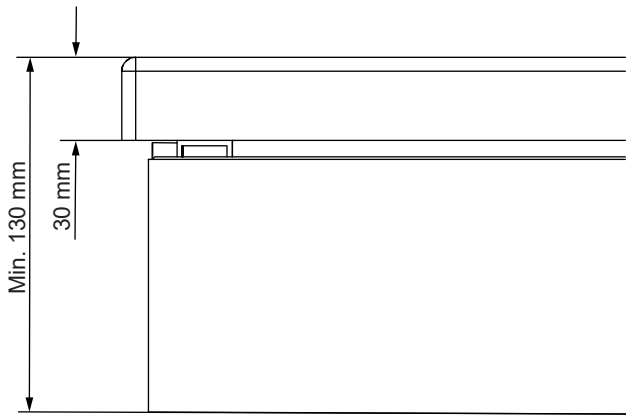

Tray Vista CO right

Tray Vista CO left

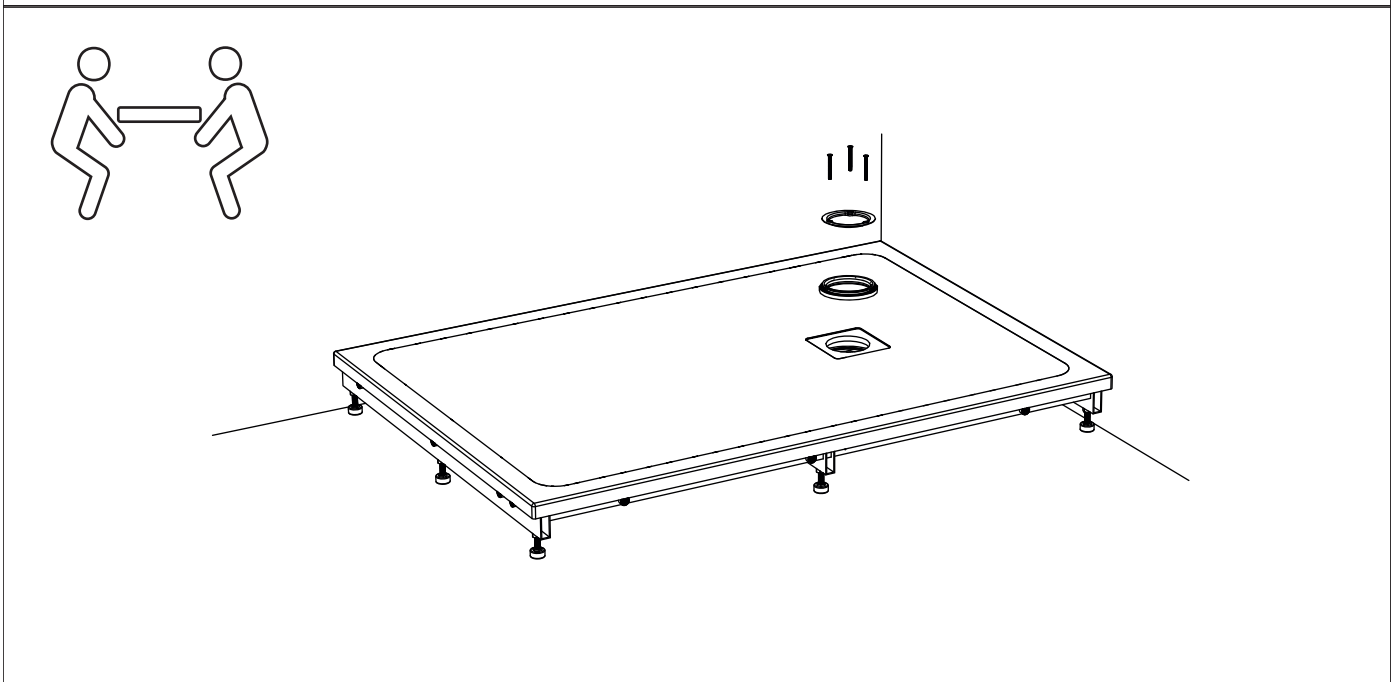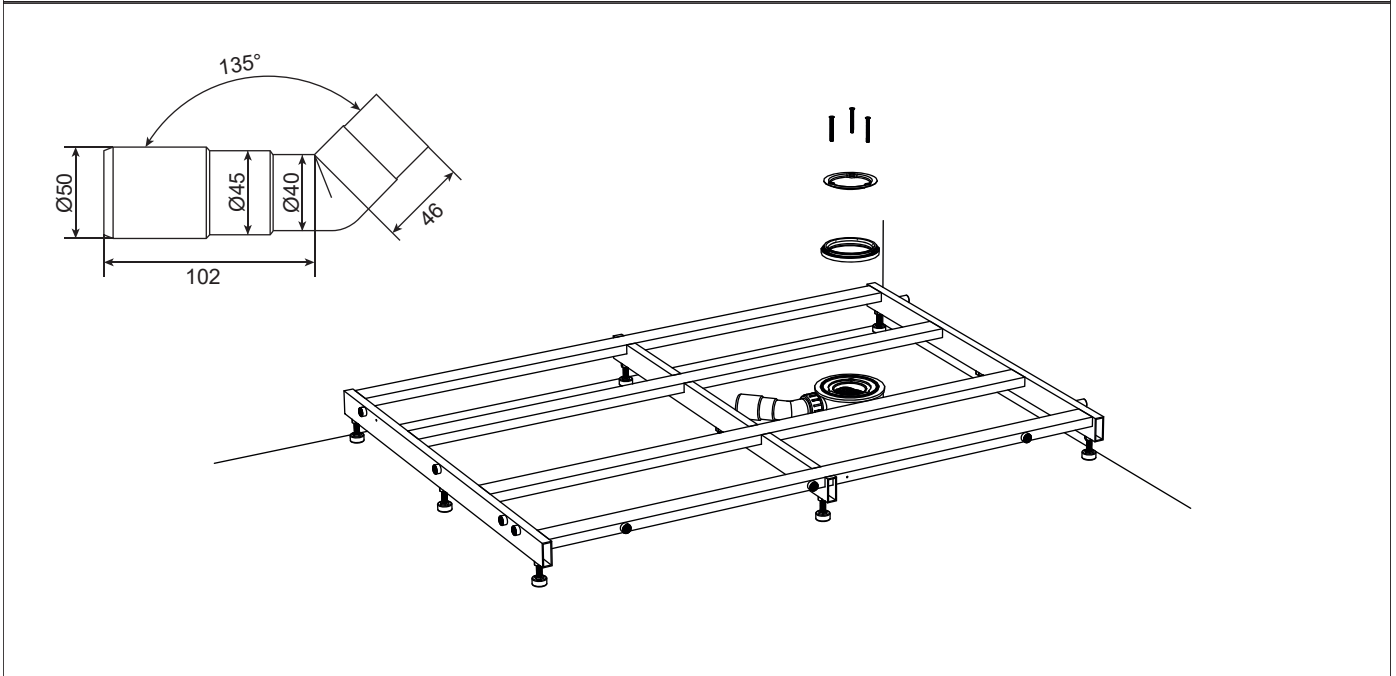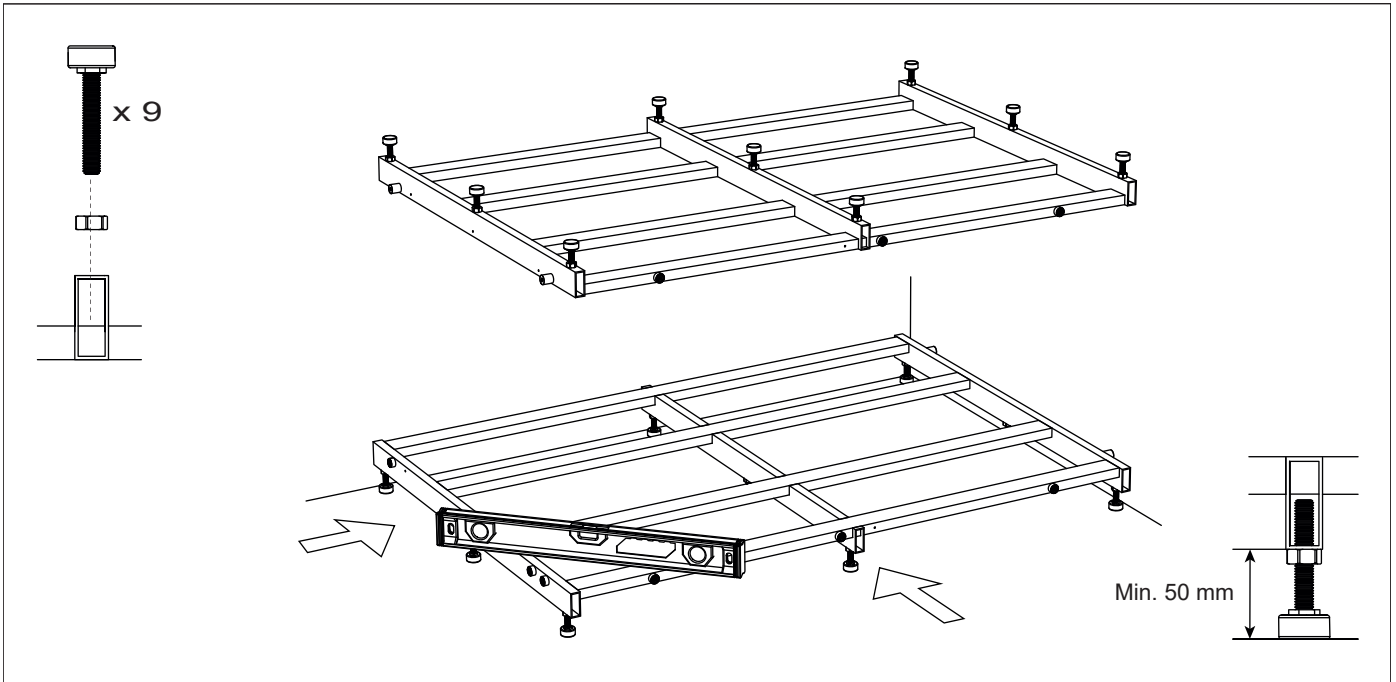

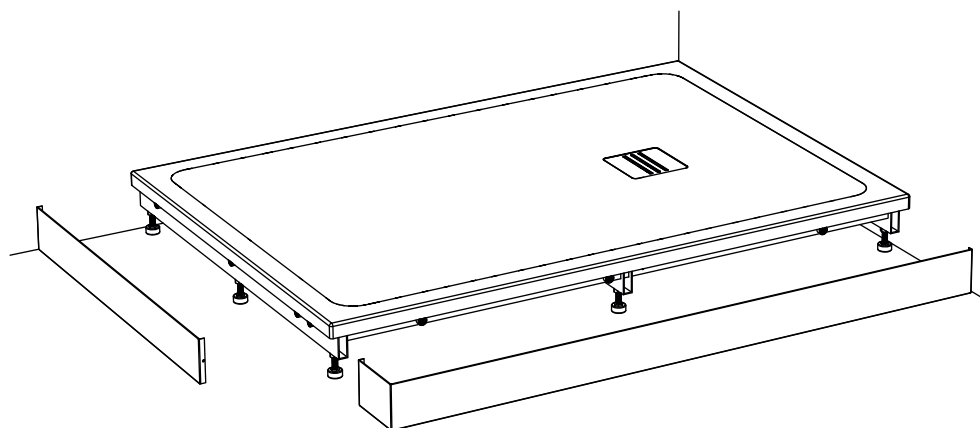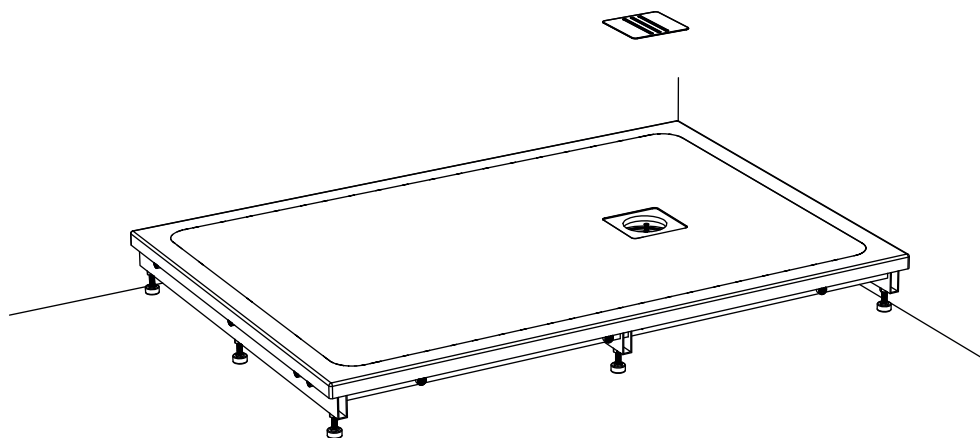

TYLÖ

For other languages please contact marketing@sauna360.com